



mjm
ebikes

STF21Y

User Manual





STF21Y

User Manual

Thanks for choosing MJM

We are excited that you have chosen to join the copper movement. MJM was founded on the goal of delivering an uncompromised product that also doesn't cost a fortune. We love to help our customers find that inner child joy of riding a bike without the effort and strain of having to pedal yourself up hills and through wind.

Read through this manual carefully before operating your bike for the first time.

We highly recommend having a bicycle mechanic assemble your bike if you are not comfortable doing it yourself.

If you have any questions about your product, please reach out and ask.

You can contact us at:

calgarysales@mjmwheels.com

403 475 6488

Again, thank you for choosing MJM. Ride On!

Safety Check

It is important to check over the bike before use to ensure a safe ride.

Check all quick releases to ensure they are tight. This includes the front wheel and seat post. Ensure wheel bolts, brake caliper bolts, handle bar bolts, and pedals are all tight. Inflate tires to within the recommended psi range. For STF21Y we recommend 18-20 PSI. Test brakes and shifter to make sure they are operating normally.



Maintaining your ebike

Our ebikes just like all bikes require regular maintenance for optimal performance. Regularly cleaning the bike will reduce any potential wear over the years.

Lubricating the chain, derailleur, and sprocket will keep your bike running smooth, reduce wear, and minimize risk of greater problems over time. We recommend using a chain lube made specifically for bikes. Apply every 100km to keep your bike running smoothly.

Inspect the spokes to ensure they are tight. With the extra stress the motor puts on the rear wheel it is important to regularly check for any loose spokes. If some seem more loose than others use a spoke wrench to tighten them to be the same tension as the others.

Inspect your bike on a regular basis for wear or any potential issues that can arise.

If you are not comfortable working on your bike we recommend bringing your bike to an MJM location or to a trained bicycle mechanic to work on your bike.





Battery

The battery is a 48V 17 AH lithium ion battery. The battery comes with LEDs and a button on the top of the battery for checking battery level, a charger port on the side, and a twist dial on the front for removing the battery from the bike.

Installation and Removal

To install the battery on the bike, first fit the bottom of the battery to the bike. Then push the rest of the battery into place. Press firmly until you hear a distinct click indicating the battery is locked to the bike.

To remove the battery from the bike first insert and twist the key located on the side of the bike. The battery will unlock and drop slightly. Then using the dial on the front of the battery twist left or right to fully unlock the battery from the bike.

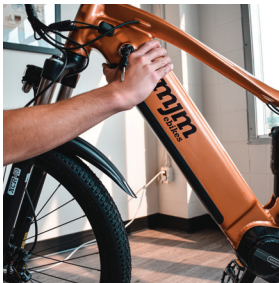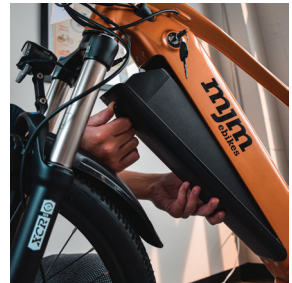

See video for demonstration:

<https://www.youtube.com/watch?v=7AY5hEfHczM>



Battery

Charging

For charging, plug the battery into the charger. You will see a red light on the charger indicating that it is charging. Once the light turns green the battery is at 100% and the charger will automatically stop charging.

Although the charger does automatically shut off, it is not recommended you leave the battery on the charger for long periods of time. In the rare event that this function fails it can cause serious damage to the battery.

Charging should take 4 - 6 hours. If your battery is still not fully charged after 12 hours on the charger, contact MJM as there is likely something wrong with the battery or charger.

- avoid blocking the fan on the charger to prevent overheating
- avoid charging in extreme temperatures. Charging between 10 - 25 degrees Celsius is ideal
- do not charge in strong sunlight
- only use the charger that has been supplied to you. If you require a new charger contact MJM and we will be happy to assist

Battery Storage

- avoid storing in extreme temperatures. Storing at 10 - 25 degrees Celsius is ideal
- store in a dry location. High humidity can damage the battery
- if storing for months at a time, store battery between 70% and 20%. Avoid storing fully charged or fully depleted
- check the battery each month and top up the charge if necessary



Display and Controller

Turning the bike on and off

Press and hold the power button. You will see the display flash on and show all your information. To turn off, press and hold the power button until the screen turns off. It should only take a few seconds.



Note: First ensure the battery is charged and installed on the bike correctly.



Note: The bike will automatically turn off after 5 minutes if the bike is stationary.

Controller video tutorial:

<https://www.youtube.com/watch?v=soMey36cKqY>



Display and Controller

Pedal Assist (PAS) Levels

This is the level of assistance the motor will deliver once activated. Your bike has 5 PAS levels numbered from 1 - 5 with 1 being the lowest level of assistance to 5 being the highest. Use the “+” and “-” buttons to adjust the PAS level.

If you want to ride with no assistance press the “-” button until a 0 is shown in the assist section.

Lights - Turning on and off

To turn the lights on and off, when the bike is turned on press and hold the “+” button. After a couple seconds you will see the headlight icon pop on your display, both the front and rear lights will turn on. Once you see this, release the “+” button and the lights will remain on until turned off or the bike turns off.

To turn off, repeat this process until you see the lights turn off.



Settings

Modes

Your bike can track and display a variety of information from the main screen that can be changed using the “i” button.



TRIP: By default when you turn the bike on it will display your trip in the bottom left. This will track the distance you have travelled in kilometers and can be reset whenever you desire. See settings mode for these instructions.

ODO: Odometer will display the total kilometers the bike has travelled. This cannot be reset.



MAX: Will show your current max speed.

AVG: Average speed.

TIME: Tracks your total ride time.



mjm
ebikes

Settings

Settings

To enter the settings menu press and hold the “+” and “-” buttons together for a couple seconds. The display will change and you will see multiple icons. Use the “+” and “-” buttons to toggle through the settings, use the “i” button to select.

Wheel

Setting the wheel diameter. Use the “+” and “-” buttons to adjust the wheel diameter then press “i” to confirm. The setting for the STF21Y must be set to 28.

Speed Limit

All our bikes are set to 32km/hr.

Brightness

Adjust display brightness.

Voltage

Sets the voltage output of the bike at each power assist level. The default is 48V. It is not recommended you change these settings.

Advanced

See advanced settings section.

Dormancy

Sets how long the bike will stay on before shutting off when there is no input. The default is 5 minutes.

Unit

Can toggle between metric and imperial measurements.

Password

If you would like to set a password to lock the display whenever the bike turns off, you can set that here. The default is no password.

Factory

This will reset everything back to its original factory settings.

Display

To reset the trip select “**Trip Reset**” with the “i” button so the “**NO**” turns yellow. Once “**NO**” is highlighted yellow press the “-” button and it should change to “**YES!**” Press “i” one more time and “**YES!**” should change to “**Reset Clear**”. The trip is now reset.

AL Sensitivity

“**Automatic Light Sensitivity**” Adjusts the sensitivity of when the automatic lights will turn off and on. The default value is 3.

Exit

Return to the main display screen.



Settings

Advanced Settings

1. Speed Sensor
2. Assistant Num
3. Power Set
4. Current Limit
5. Sensitivity
6. Slow Start
7. SOC V

MJM does not recommend changing any of the advanced settings.

Error Code

- 21** - Current Abnormality
- 22** - Throttle Abnormality
- 23** - Motor Abnormality
- 24** - Motor Hall Signal Abnormality
- 25** - Brake Abnormality
- 30** - Communication Abnormality

In the event your ebike flashes an error code contact MJM and we will be happy to assist you.

403 475 6488

calgarysales@mjmwheels.com



Care Tips

MJM Care Tips

We want your ebike to work well for years to come, so here are some things you can do to make your bike last as long as possible:

Keep it clean

A dirty bike can lead to rusting, unnecessary wear, and unwanted sounds. As there are electronics involved, use water sparingly to avoid damaging the bike. We recommend buying a bike specific wash for cleaning your bike. Household cleaners like dish soap or detergent may contaminate and damage some components. For cleaning your brake rotors, use a clean microfibre or paper towel and isopropyl alcohol.

Get it checked over

We recommend you have your ebike professionally inspected once a year. This is a service just about any bike shop offers and is something we offer in our shops for \$50. This inspection will ensure your bike is working well and will enable you to stay on top of the wear your bike will inevitably endure. As you ride, parts like your brakes, tires, chain, and gears all slowly wear out. Tracking this wear and replacing these parts as needed will make sure you have the best experience with your bike.

Unsure? Just ask

If there is anything you are unsure of, whether it's how to maintain or clean your bike, or something that seems not quite right, reach out and ask us! We are always happy to help answer questions.



mjm
ebikes

Warranty



Thank you for purchasing an MJM Ebike. This bike, if properly maintained, will give you years of enjoyable riding. Below is the MJM Wheels warranty outline. Please review it and do not hesitate to ask any questions you might have regarding it. For full details on our policy please visit the warranty section found on our website.

You have purchased much more than a typical bicycle. It is heavier, full of electrical and mechanical components and connection points, and more expensive than a typical bike. For that reason, you should have an annual maintenance check over and servicing done on the ebike to keep your investment operating at its peak condition.

Basic Terms

1. **Electronics** - 1 year from the date of purchase on controller, motor, battery, lights and display against manufacturer defects
2. **Paint and Graphics** - 1 year from date of purchase
3. **Frame** - 2 years from date of purchase against cracks
4. **Mechanical Wear Parts** - 30 days from date of purchase against manufacturer defects - rims, spokes, tires, chain, suspension, seats, and brakes



mjm
ebikes

Contact



MJM Wheels

3324 114th Avenue SE
Calgary, Alberta T2V 3V6

403 475 6488

calgarysales@mjmwheels.com

mjmebikes.com



mjm
ebikes

